

GLUING INSTRUCTIONS


The trays are laid out overlapping, and about 1/8" or so space for glue.

There should be a 1/2" or so air in each end of the bench for expansion of the trays when they heat up.


Do not apply glue between the trays just on top of the seams as shown. Make it look nice. Lay it on smooth and leave it alone.

No smearing with a spatula or anything else.

Layout all the trays before gluing anything.

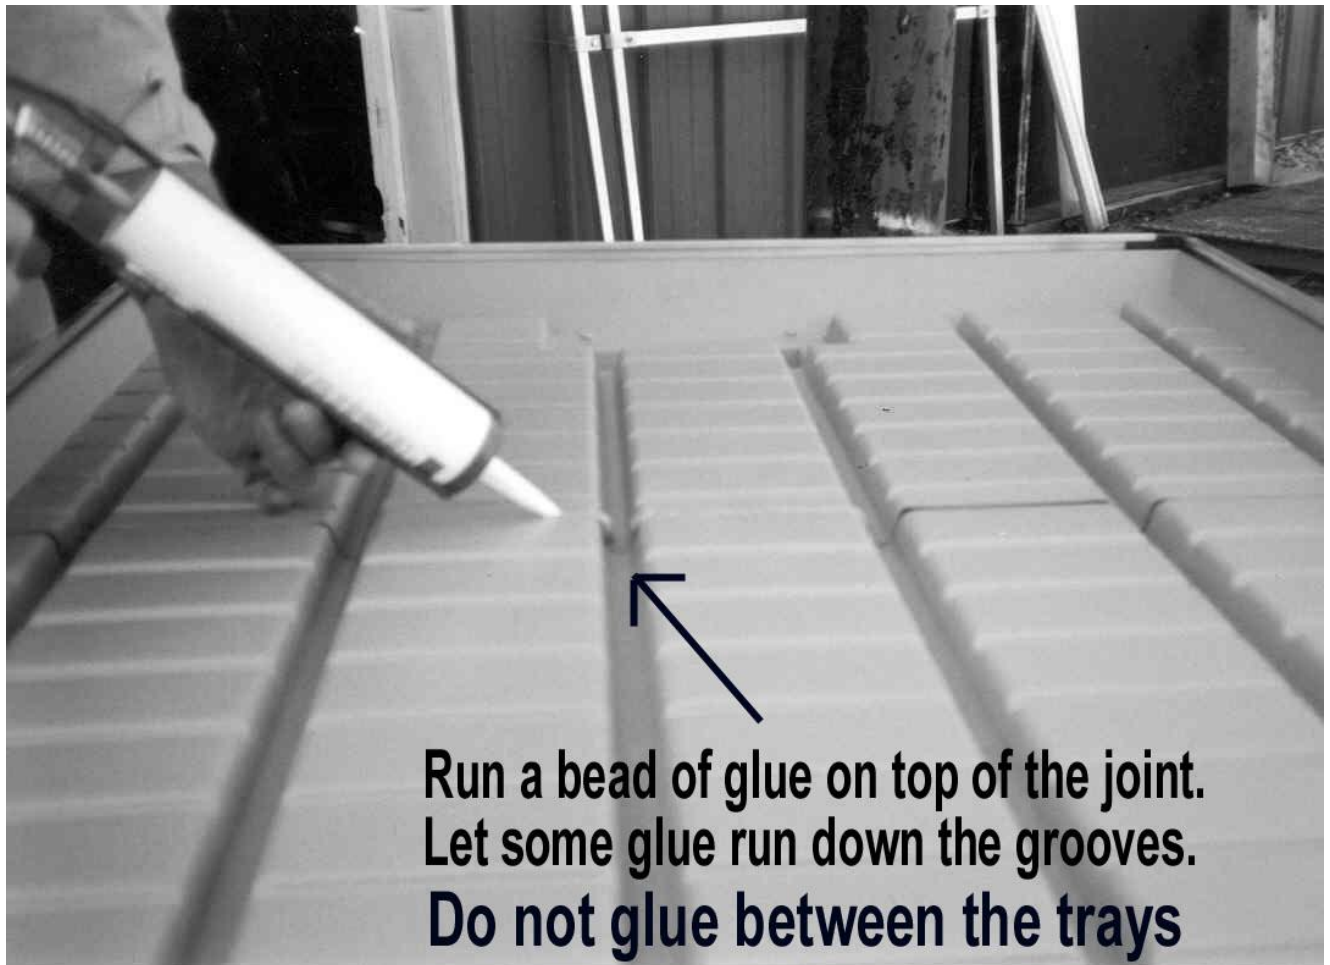


Do not glue between the trays, just right on top of the joint.

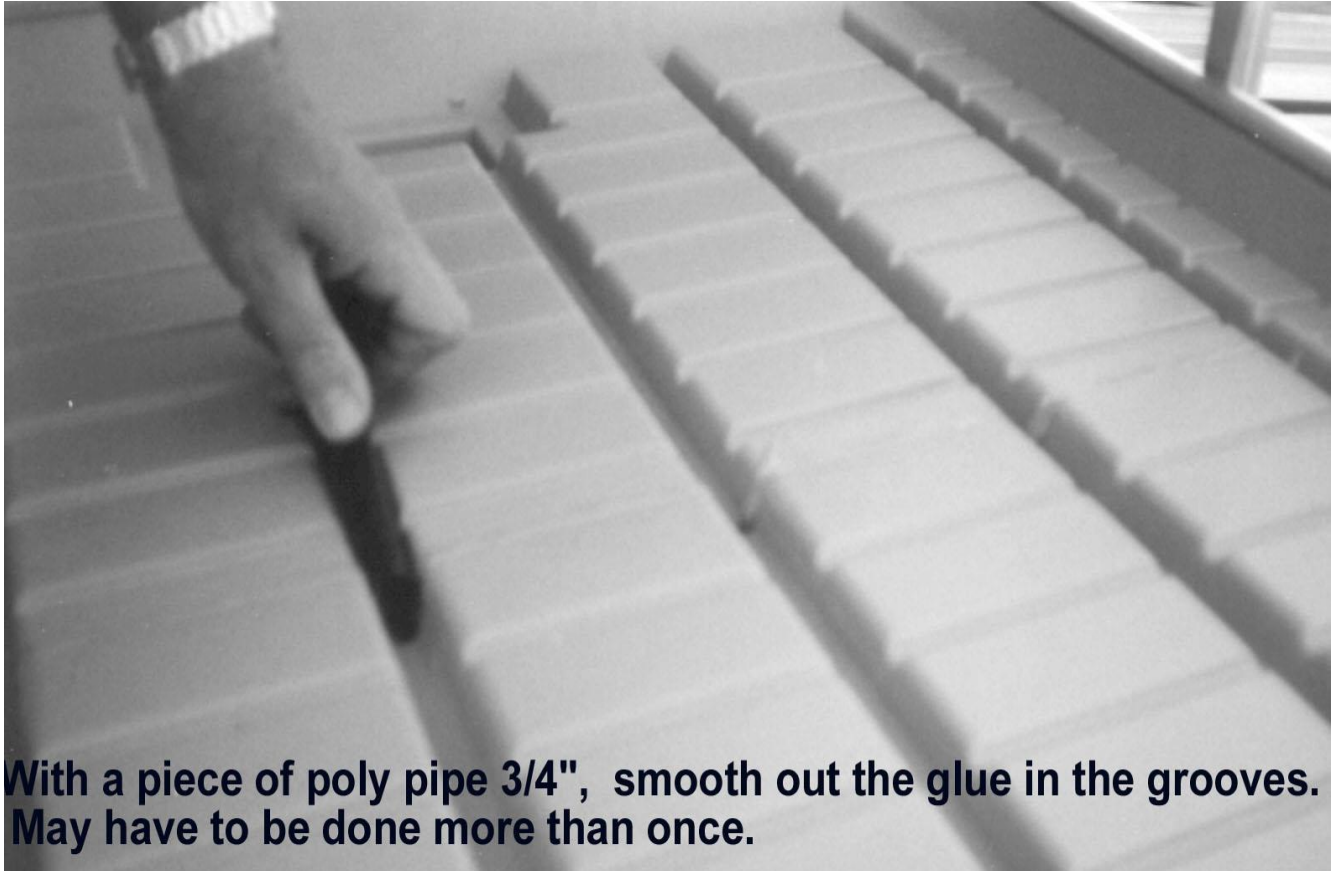

With a piece of poly pipe 3/4", smooth out the glue in the grooves. May have to be done more than once.

About 1/8" space left for the glue.

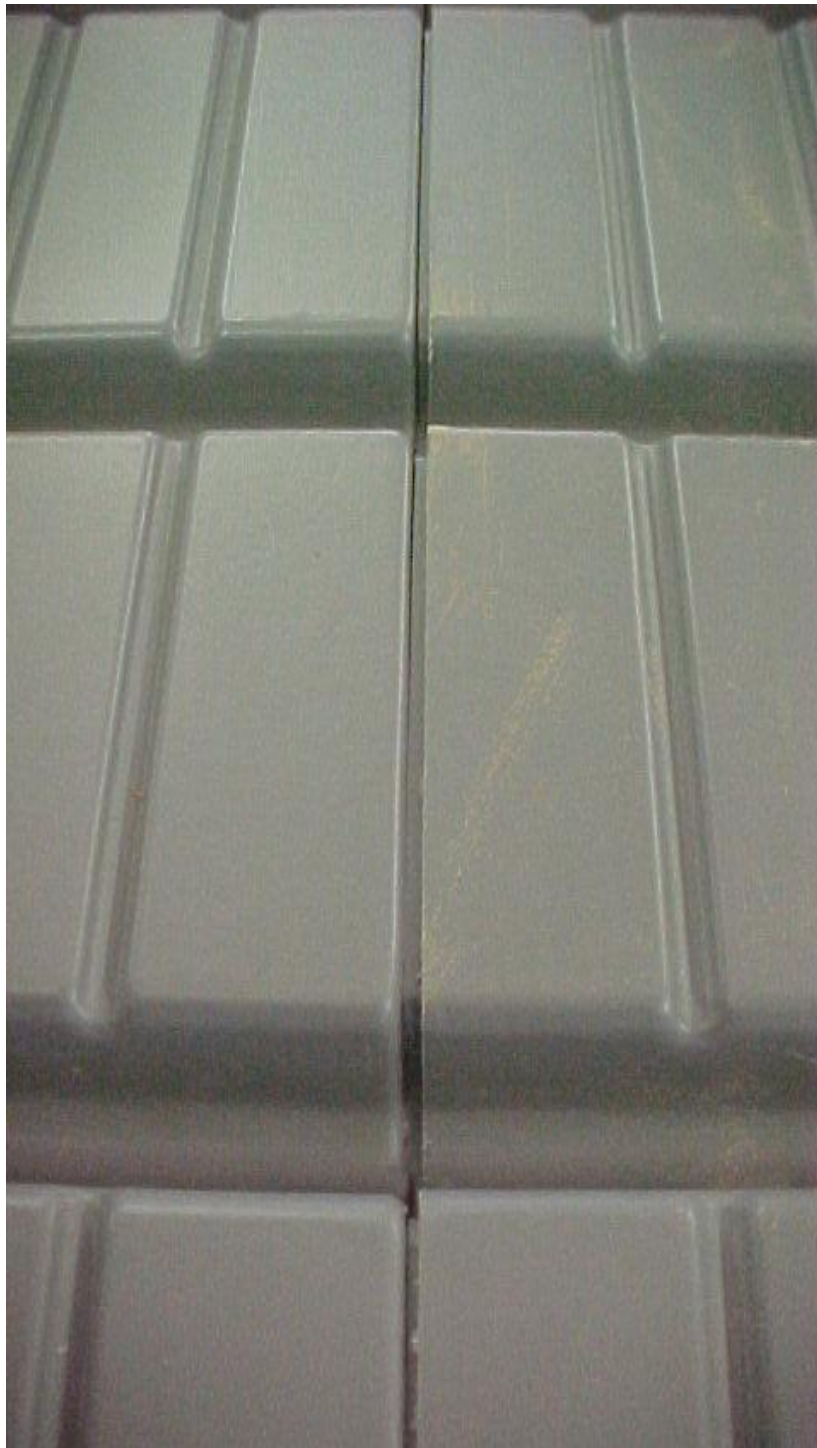

About 1/8" space left for the glue.

Fill and drain fitting installed.

